


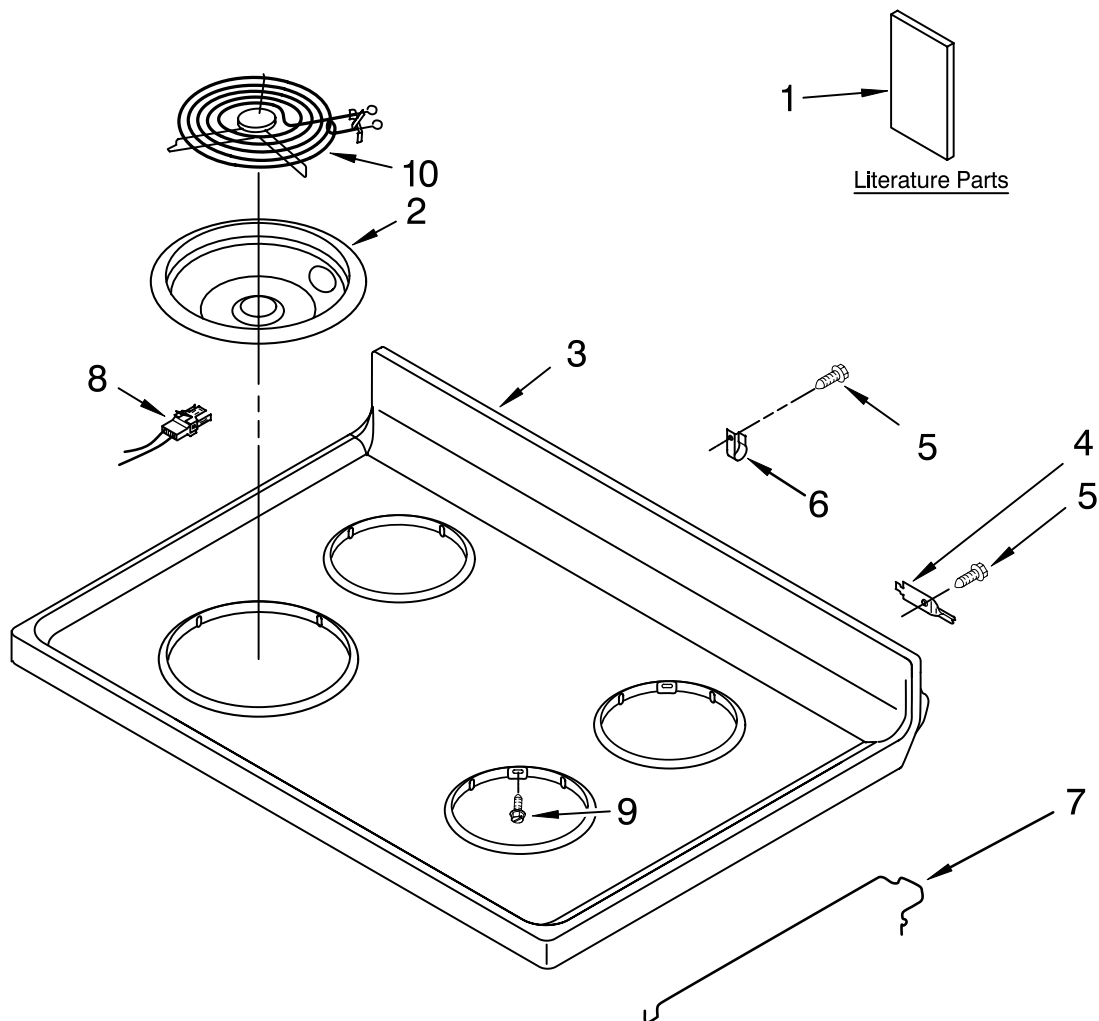

COOKTOP PARTS

FOR MODELS: RF111PXSQ3, RF111PXSQ3
(Designer White) (White/Black)

30" ELECTRIC FREESTANDING
STANDARD CLEAN RANGE



Illus. No.	Part No.	DESCRIPTION
1	W10141166	Literature Parts Instructions, Installation Anti-Tip Template
	9757142	English/Spanish
	9757143	English/French
	9763000	Owners Manual
	W10114281	Sheet, Tech
	9762761	Safer Cooking Tips


Illus. No.	Part No.	DESCRIPTION
2	3195208	Bowl, Drip
	3195209	6" Chrome (3)
	3195209	8" Chrome (1)
3	3186235	Cooktop
	3186235	White
4	3195060	Hinge, Cooktop (2)
5	3196178	Screw

Illus. No.	Part No.	DESCRIPTION
6	308605	Strain Relief
7	3195812	Rod, Support (2)
8	814399	Receptacle, Elmnt
9	3196154	Screw
10		Element, Surface (Includes #8)
	9761348	6" (3)
	9761346	8" (1)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

FOR MODELS: RF111PXSQ3, RF111PXSQ3
(Designer White) (White/Black)

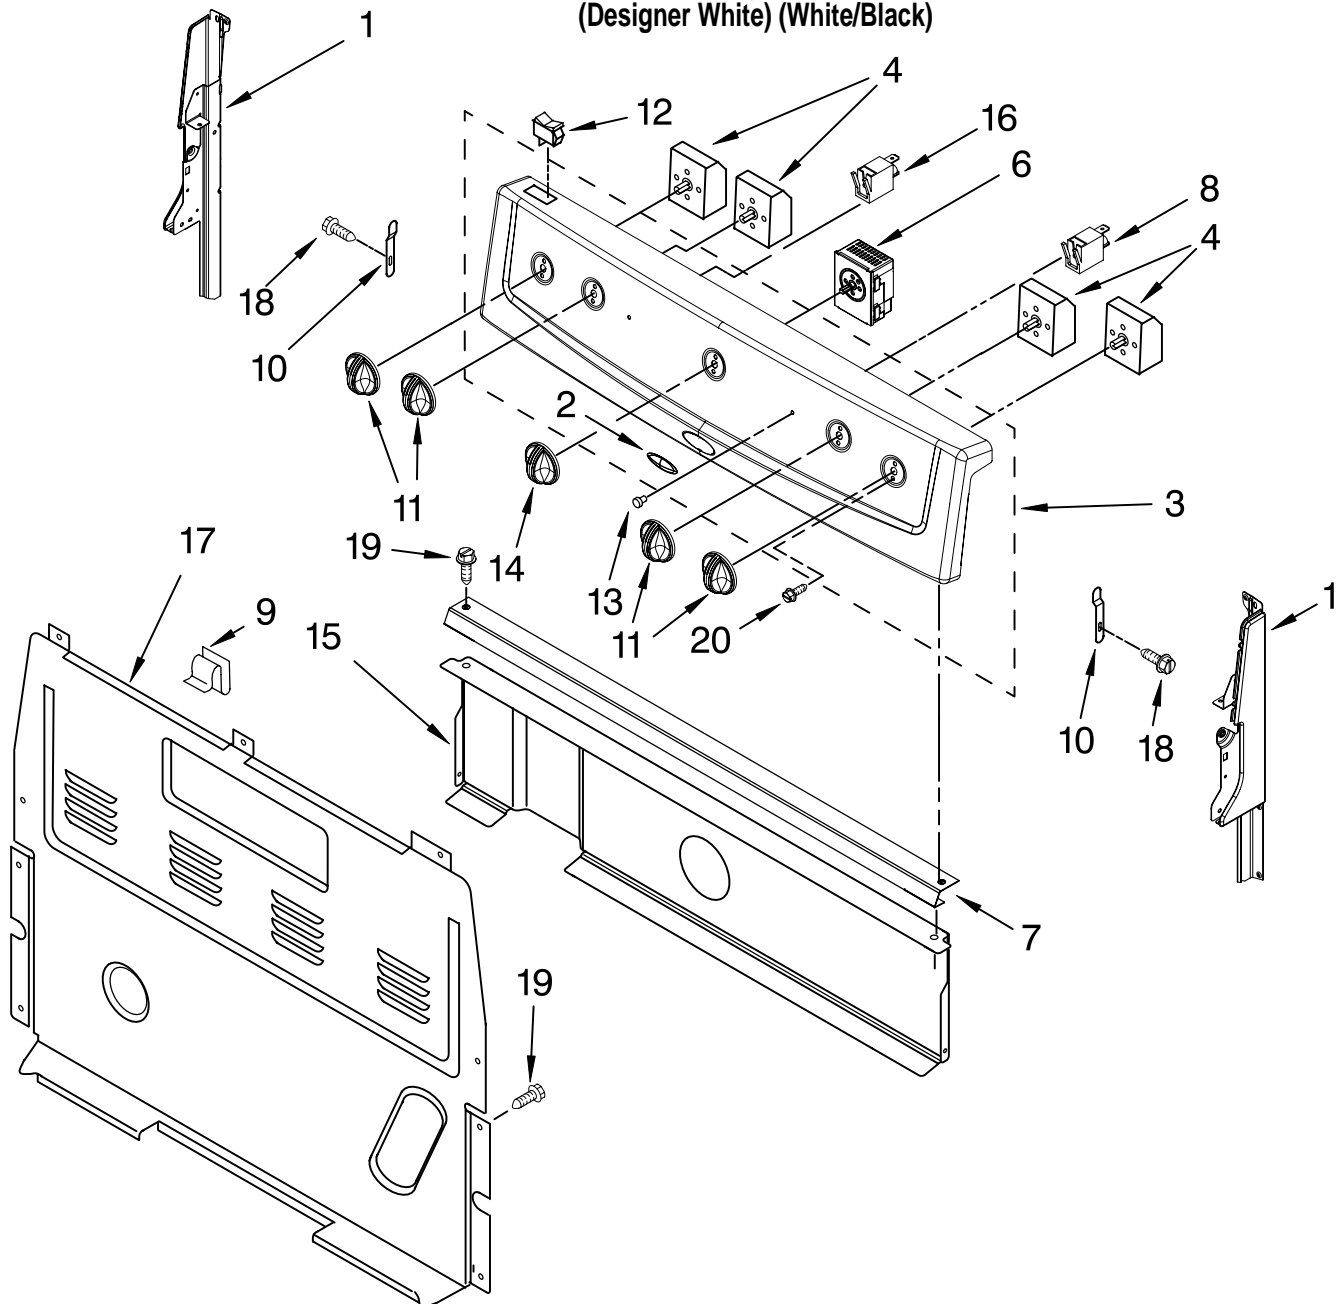


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	W10009040	Endcap Left Hand-White	4	3148953	Switch, Infinite Use W/ 8" Element	12	3149360	Switch, Rocker
	W10009080	Left Hand-Black		3148951	Use W/ 6" Element	13	3196068	Lens, Indicator
	W10009050	Right Hand-White	6	9762215	Switch, Selector	14	9762526	Knob, Thermostat White
	W10009090	Right Hand-Black	7	W10182322	Brkt-Mntg Console		9762524	Black
2	9757609	Nameplate	8	8523266	Indicator, 250V	15	8053912	Shield, Heat
3	W10170675	Panel, Backguard White	9	8273564	Clip	16	8523265	Indicator, 125V
	W10170676	Black	10	3196200	Clip, Spring (2)	17	8272473	Cover, Upper Rear
			11		Knob, Infinite (4)	18	3196166	Screw
				9761962	White	19	3196178	Screw
				9761964	Black	20	3400882	Bolt

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

FOR MODELS: RF111PXSQ3, RF111PXSQ3
(Designer White) (White/Black)

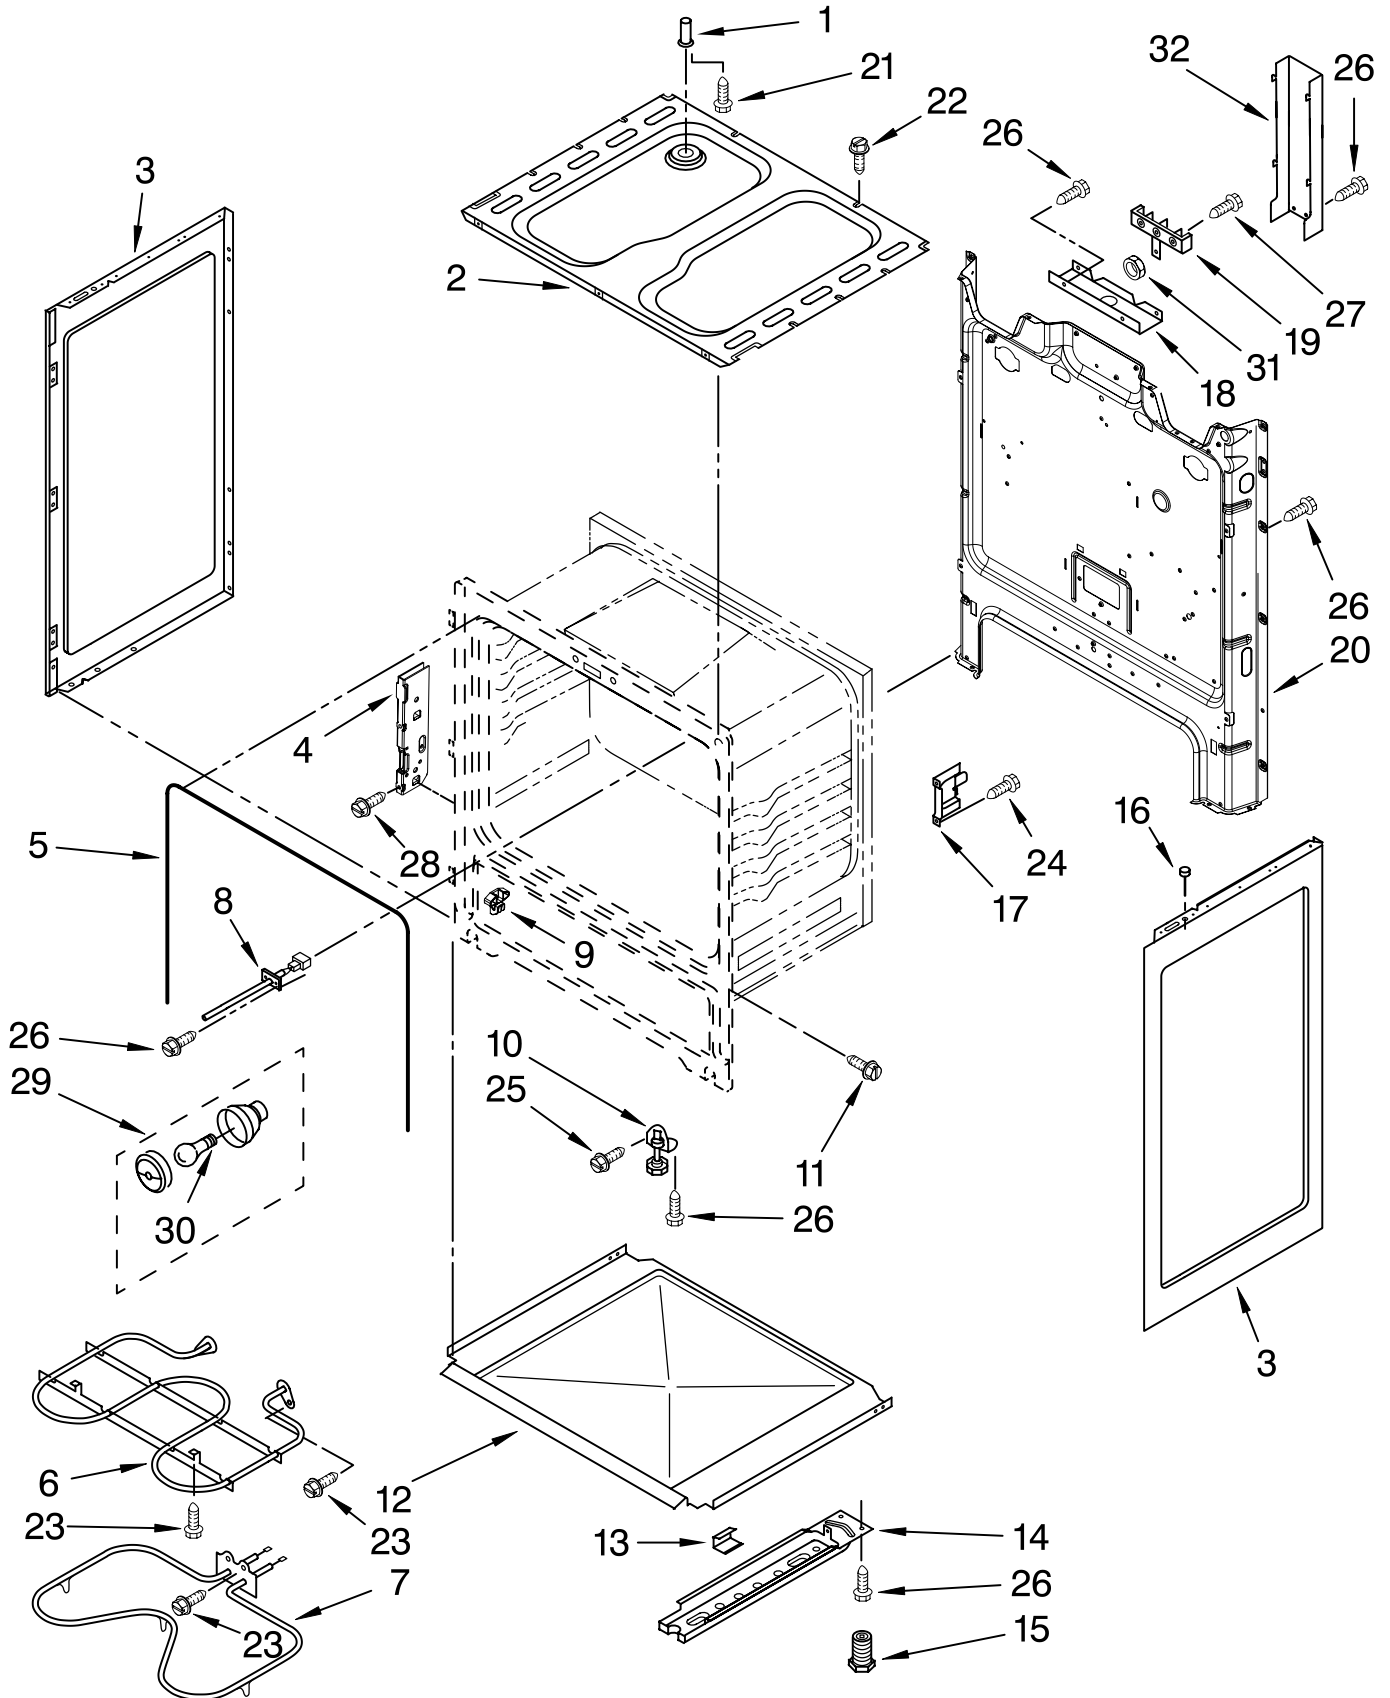

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

FOR MODELS: RF111PXSQ3, RF111PXSQ3
(Designer White) (White/Black)


Illus. No.	Part No.	DESCRIPTION
1	3169143	Vent Tube
2	3186144	Box, Burner
3		Panel, Side (2)
	8053830	White-Textured
4	9760407	Brkt-Mounting
5	W10129032	Seal, Oven Door
6	9757340	Element, Broil
7	9758541	Element, Bake
8	W10181986	Sensor
9	W10114344	Glide, Drawer Frnt
10	3196037	Foot, Front (2)
11	W10067840	Screw
12	8054068	Tray, Insulation
13	3196576	Clip, Panel (6)
14	9760314	Rail, Base (2)
15	W10058460	Foot, Rear (2)
16	3195809	Bumper, Side (2)
17	3186116	Support, Oven (2)
18	3186034	Bracket, Service
19	9761958	Block, Terminal
20	8274034	Back, Main
21	3196567	Screw
22	3196168	Screw
23	3196174	Screw
24	3196169	Screw
25	3196179	Screw
26	3196178	Screw
27	3400016	Screw
28	W10031780	Screw
29	3196701	Light Socket Assy
30	311255	Bulb, Oven Light
31	112432	Nut
32	9758283	Cover, Box

INSULATION

8273263	Insulation, Wrap
8272611	Insulation, Back

DRAWER & BROILER PARTS

FOR MODELS: RF111PXSQ3, RF111PXSQ3
(Designer White) (White/Black)

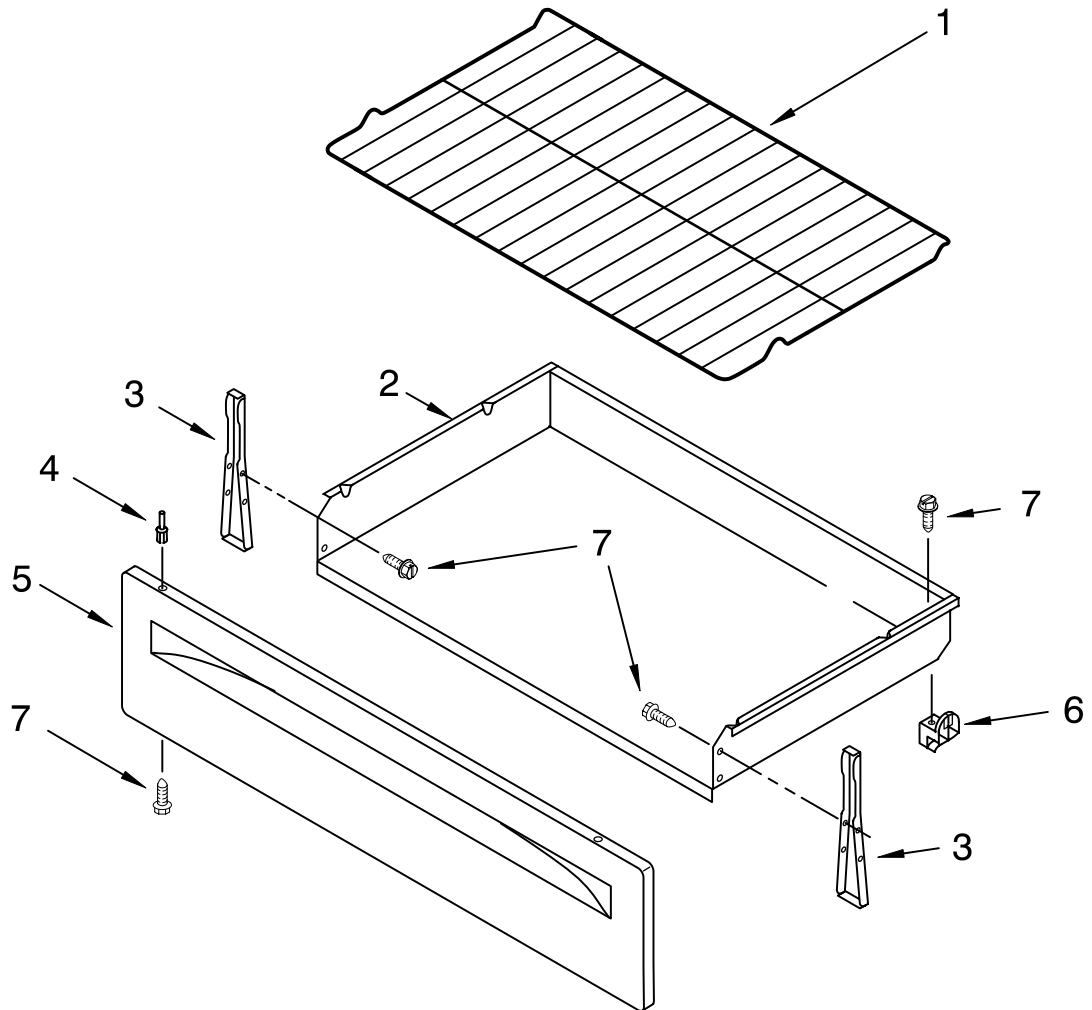


Illus. No.	Part No.	DESCRIPTION
1	W10138079	Rack, Oven (2)
2	9761031	Drawer, Storage
3	W10174396	Bracket, Drawer(2)
4		Rivet, Push (2)
	3196814	White
5		Panel, Drawer Frnt
	8053339	White
6	8053334	Glide, Drawer (2)
7	3196168	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR PARTS

FOR MODELS: RF111PXSQ3, RF111PXSQ3
(Designer White) (White/Black)

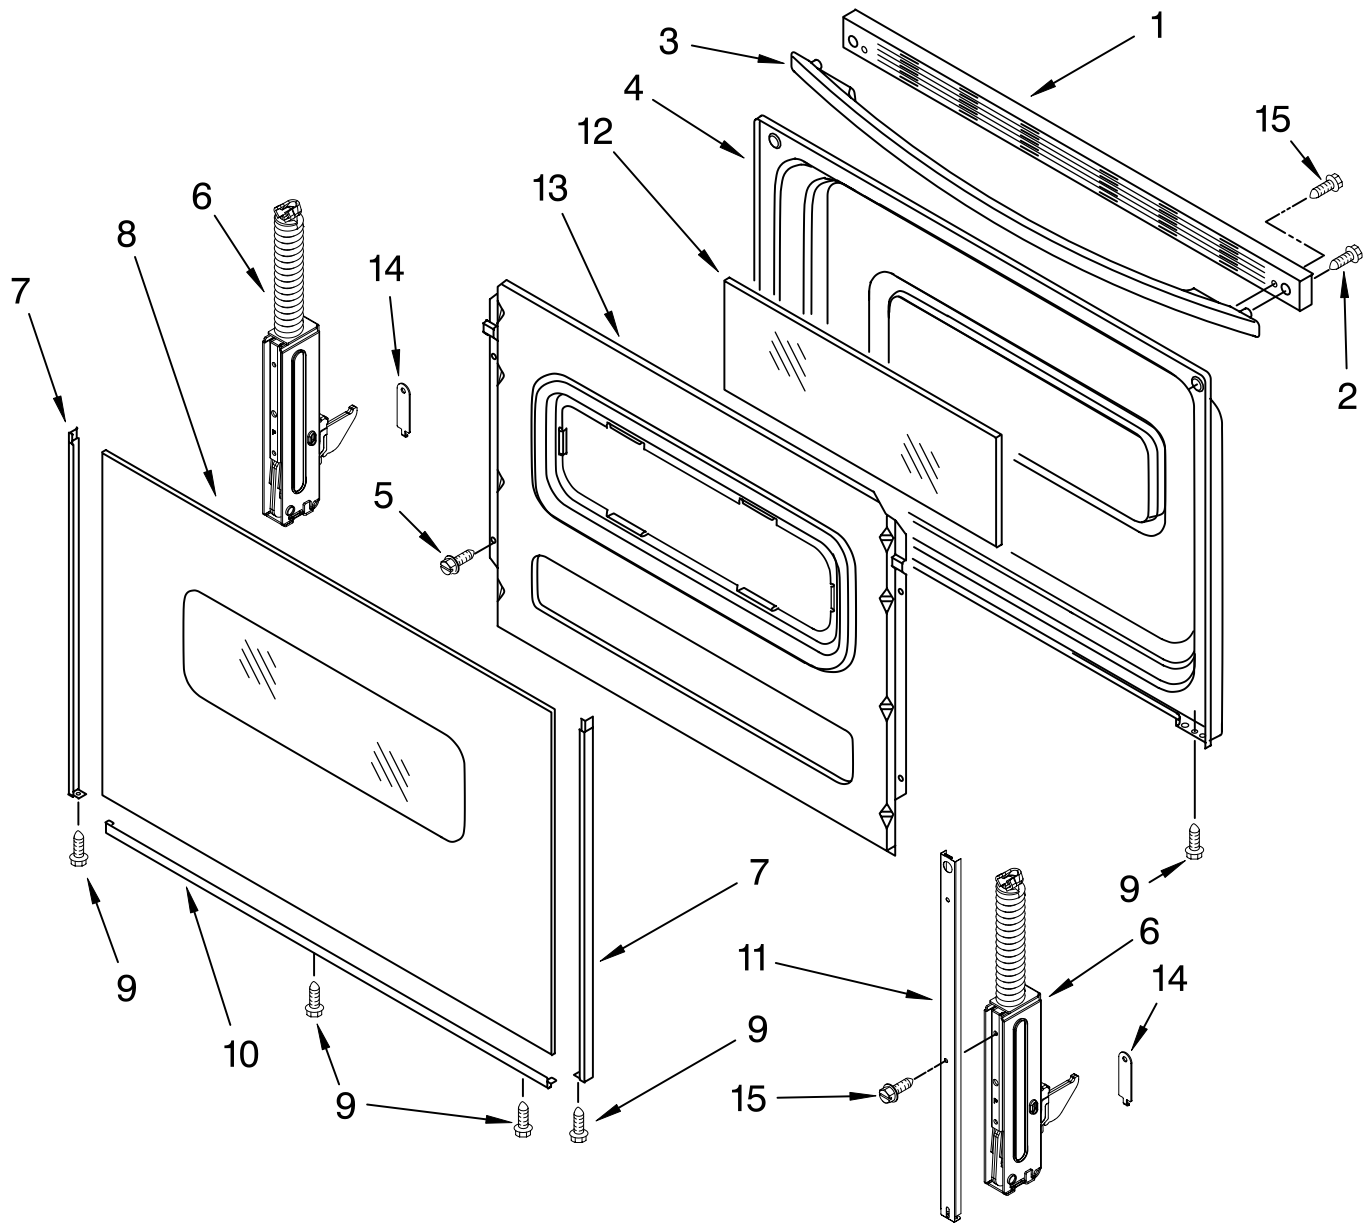

Illus. No.	Part No.	DESCRIPTION
1	W10144869	Trim, Top
	W10144870	Black
2	3196164	Screw
3	W10118384	Handle, Door
	W10118385	Black
4	9761340	Liner, Door
5	W10031790	Screw
6	9761494	Hinge, Door (2)

Illus. No.	Part No.	DESCRIPTION
7	8523172	Trim, Door (2)
	8523171	Left Hand-White
	8523166	Right Hand-White
	8523165	Right Hand-Black
8	9762476	Glass, Door
	9762477	Black

Illus. No.	Part No.	DESCRIPTION
9	3196160	Screw
10	8523175	Trim, Lower
	8523177	White
	8523177	Black
11	W10113759	Strap, Door
12	9758163	Window, Inner
13	9761500	Retainer, Insul.
14	9761517	Clip, Dr Mntg (2)
15	W10031780	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS (NOT INCLUDED)

FOR MODELS: RF111PXSQ3, RF111PXSQ3
(Designer White) (White/Black)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

Following Parts Not Illustrated

SPLICING WIRES--25FT. LENGTH

242828	Wire, Black
	12 Ga. 150° c
242821	Wire, Blue
	14 Ga. 150°c
242822	Wire, Brown
	14 Ga. 150°c
242830	Wire, Brown
	14 Ga. 200°c
242823	Wire, Green
	14 Ga. 150°c
242824	Wire, Orange
	14 Ga. 150°c
242825	Wire, Red
	14 Ga. 150°c
242831	Wire, Red
	14 Ga. 200°c
242827	Wire, Yellow
	14 Ga. 150°c

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

REFINISHING MATERIAL

799832	Kit, Porcelain Repair (White)
242756	Touch-Up Self-Clean(1/2 Pt)
261582	Grease

INSULATION

261514	Insulation, Fiberglass (1-1/2" x 24" x 120")
240132	Insulation, Fiberglass (2-1/2" x 22" x 120")

PAINT, TOUCH-UP (1/2oz.)

72017	White
4392899	Biscuit
511873	White Porcelain (2 Oz.)

PAINT, PRESSURIZED SPRAY (12 oz.)

350930	White
4392901	Biscuit
285006	Superior Black
206922	Primer (White)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

PAINT, BULK (1 qt.)

799344	White (Uncut)
4392900	Biscuit (Uncut)

ACCESSORY PARTS

241430	Foil, Aluminum Oven (18" x 25')
3184478	Cleaner, Glass

ANTI-TIP KIT

W10017440	Anti-Tip Kit
-----------	--------------

WIRING HARNESS PARTS

9761476	Harness, Cooktop
W10113075	Harness, Oven
313660	Clip, Ground Wire
311227	Wire, Ground
3196154	Screw, Grnd-Cktop
3196174	Screw, Grnd-Back
3196173	Screw, Ground

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST